

TSWC110: Fixing Kit for the Back Outlet Clinical Basin

PARTS LIST

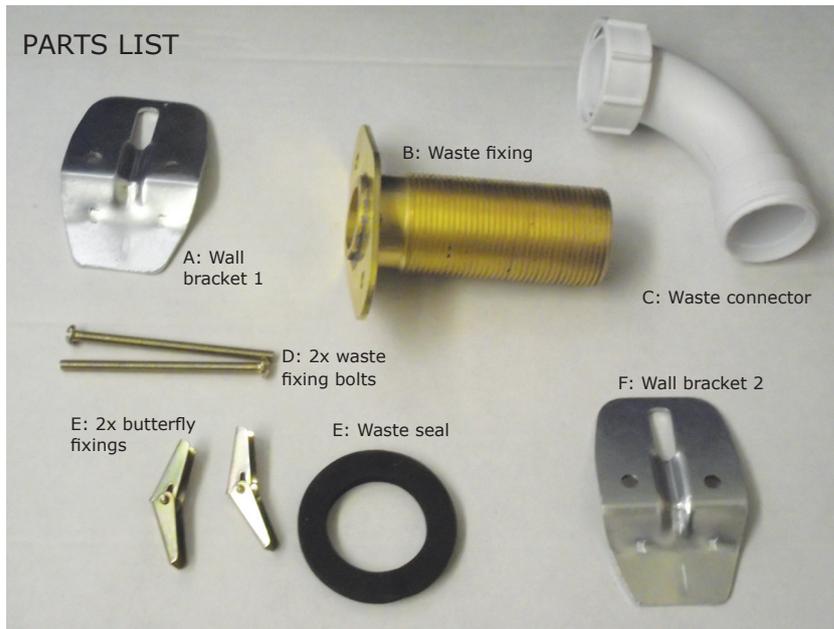


Figure: 1

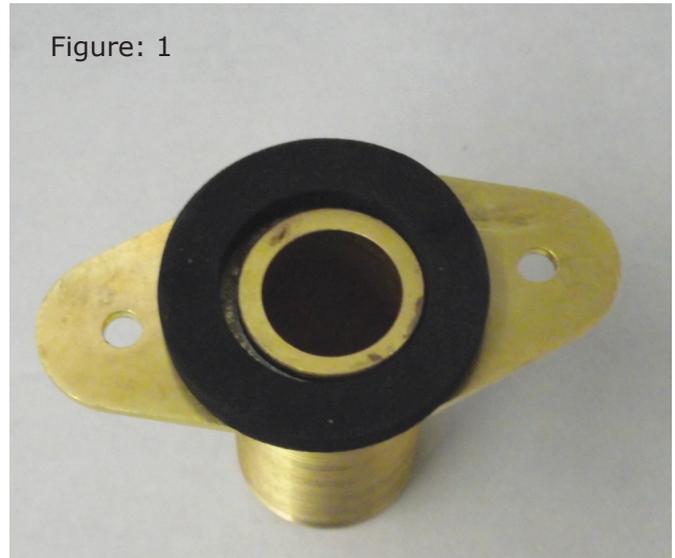


Figure: 1 Put seal on the end of waste fixing and place over waste outlet at rear of basin. See Figure 2.

Figure: 2



Figure: 3



Figure 3: Using fixing bolts and butterfly clips screw waste fixing to basin.

Figure: 4



Figure 4: Fasten waste connector on to waste outlet.

Figure: 5

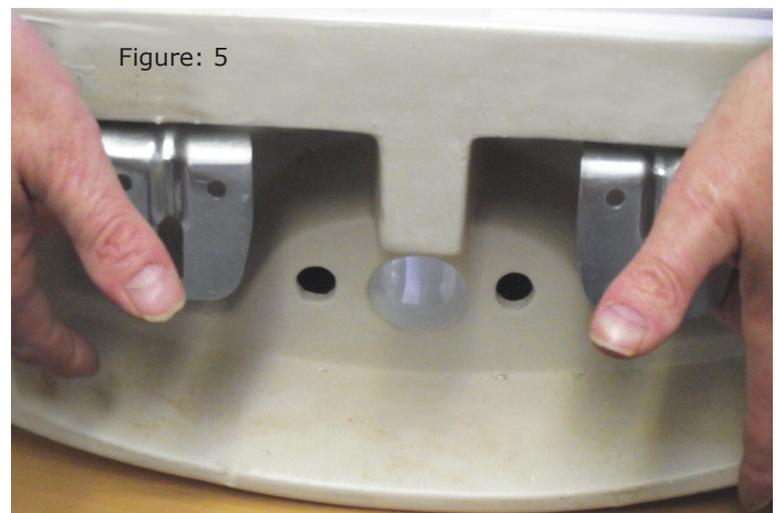


Figure 5: Fasten wall brackets to cavity wall firmly using silicone sealant along rear of basin for extra strength. Slide basin over wall brackets. Run bead of silicone around rear of basin to finish.